
 
Starting automatic cleaning on the cooling unit with CleanMaster for the SU12 and A1000

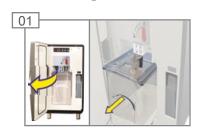


Open door.
Pull the milk container to the front.



Pull the flow / no flow adapter upwards and from the suction fitting.

Turn the flow / no flow adapter 180°.

Place the flow / no flow adapter onto the suction fitting.

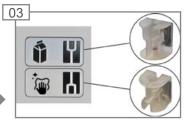

i

The symbols indicate the correct position of the flow / no flow adapter for milk delivery and cleaning.



Slide the milk container all the way in.

Rotate the cleaning lever to the "Cleaning" position.



The machine switches automatically to the cleaning mode.

Press "Yes" to start the cleaning process.



Follow the instructions on the user interface and confirm with "Continue". The machine guides you to the next step.

When the cleaning cycle is complete, the machine either switches back to the maintenance level or the energy saving mode. Your service technician can set the desired option for you.

Starting automatic cleaning on the cooling unit with CleanMaster for the SU05



Open door.
Remove the milk container and store the milk in a cool location.



Slide the cleaning container in.



The machine switches automatically to the cleaning mode.

Press "Yes" to start the cleaning process.



Follow the instructions on the user interface and confirm with "Continue". The machine guides you to the next step. When the cleaning cycle is complete, the machine either switches back to the maintenance level or the energy saving mode. Your service technician can set the desired option for you.

Changing cleaners for the CleanMaster

Unscrew the lid.

Slide the cartridge without the lid all the way in.

The seal is punctured automatically.









